

Type QI - 1A through 50A

11kV through 38kV



Illustrative

- Interrupting Capacity Assured.
- Contact us about other standards, currents and curves.

Type	Code (Removable Button Head)		Code (Solid Button Head)	
	Fuse Element		Fuse Element	
	Silver	Copper	Silver	Copper
1QI	EF1QIPCIR	EF1QIPCIR	EF1QIPCIF	EF1QIPCIF
2QI	EF2QIPCIR	EF2QIPCIR	EF2QIPCIF	EF2QIPCIF
3QI	EF3QIPCIR	EF3QIPCIR	EF3QIPCIF	EF3QIPCIF
5QI	EF5QIPCIR	EF5QIPCIR	EF5QIPCIF	EF5QIPCIF
7QI	EF7QIPCIR	EF7QICCIR	EF7QIPCIF	EF7QICCIF
10QI	EF10QIPCIR	EF10QICCIR	EF10QIPCIF	EF10QICCIF
15QI	EF15QIPCIR	EF15QICCIR	EF15QIPCIF	EF15QICCIF
20QI	EF20QIPCIR	EF20QICCIR	EF20QIPCIF	EF20QICCIF
25QI	EF25QIPCIR	EF25QICCIR	EF25QIPCIF	EF25QICCIF
30QI	EF30QIPCIR	EF30QICCIR	EF30QIPCIF	EF30QICCIF
40QI	EF40QIPCIR	EF40QICCIR	EF40QIPCIF	EF40QICCIF
50QI	EF50QIPCIR	EF50QICCIR	EF50QIPCIF	EF50QICCIF

Individual Box - Add /BOX at the end of the code

Type QI - 60A through 100A

11kV through 38kV



Illustrative

- Interrupting Capacity Assured.
- Contact us about other standards, currents and curves.

Type	Code (Removable Button Head)		Code (Solid Button Head)	
	Fuse Element		Fuse Element	
	Silver	Copper	Silver	Copper
60QI	EF60QIPCIR	EF60QICCIR	EF60QIPCIF	EF60QICCIF
75QI	EF75QIPCIR	EF75QICCIR	EF75QIPCIF	EF75QICCIF
100QI	EF100QIPCIR	EF100QICCIR	EF100QIPCIF	EF100QICCIF

Individual Box - Add /BOX at the end of the code

Type QI - 125A through 200A

11kV through 38kV



Illustrative

- Interrupting Capacity Assured.
- Contact us about other standards, currents and curves.

Type	Code (Removable Button Head)		Code (Solid Button Head)	
	Fuse Element		Fuse Element	
	Silver	Copper	Silver	Copper
125QI	EF125QIPR	EF125QICR	EF125QIPF	EF125QICF
150QI	EF150QIPR	EF150QICR	EF150QIPF	EF150QICF
175QI	EF175QIPR	EF175QICR	EF175QIPF	EF175QICF
200QI	EF200QIPR	EF200QICR	EF200QIPF	EF200QICF

Individual Box - Add /BOX at the end of the code