

## Type STD - 1A through 50A

11kV through 38kV



Illustrative

- Interrupting Capacity Assured.
- Contact us about other standards, currents and curves.

Type	Code (Removable Button Head)	Code (Solid Button Head)
	Fuse Element	Fuse Element
	Silver	Silver
1STD	EF1STDNCIR	EF1STDNCIF
2STD	EF2STDNCIR	EF2STDNCIF
3STD	EF3STDNCIR	EF3STDNCIF
5STD	EF5STDPCIR	EF5STDPCIF
7STD	EF7STDPCIR	EF7STDPCIF
10STD	EF10STDPCIR	EF10STDPCIF
15STD	EF15STDPCIR	EF15STDPCIF
20STD	EF20STDPCIR	EF20STDPCIF
25STD	EF25STDPCIR	EF25STDPCIF
30STD	EF30STDPCIR	EF30STDPCIF
40STD	EF40STDPCIR	EF40STDPCIF
50STD	EF50STDPCIR	EF50STDPCIF

Individual Box - Add /BOX at the end of the code

## Type STD - 65A through 100A

11kV through 38kV



Illustrative

- Interrupting Capacity Assured.
- Contact us about other standards, currents and curves.

Type	Code (Removable Button Head)	Code (Solid Button Head)
	Fuse Element	Fuse Element
	Silver	Silver
65STD	EF65STDPCIR	EF65STDPCIF
80STD	EF80STDPCIR	EF80STDPCIF
100STD	EF100STDPCIR	EF100STDPCIF

Individual Box - Add /BOX at the end of the code

## Type STD - 125A through 200A

11kV through 38kV



Illustrative

- Interrupting Capacity Assured.
- Contact us about other standards, currents and curves.

Type	Code (Removable Button Head)	Code (Solid Button Head)
	Fuse Element	Fuse Element
	Silver	Silver
125STD	EF125STDPR	EF125STDPF
150STD	EF150STDPR	EF150STDPF
200STD	EF200STDPR	EF200STDPF

Individual Box - Add /BOX at the end of the code